



Default jumper state

CAN1_C	0600
CAN1_T	0600
SP_E	0600
RS1_E	0600
RS2_E	0600
RS3_E	0600
RS4_E	0600
RS5_E	0600
RS6_E	0600
RS7_E	0600
RS8_E	0600
RS9_E	0600
RS10_E	0600
RS11_E	0600
RS12_E	0600
RS13_E	0600
RS14_E	0600
RS15_E	0600
RS16_E	0600
RS17_E	0600
RS18_E	0600
RS19_E	0600
RS20_E	0600
RS21_E	0600
RS22_E	0600
RS23_E	0600
RS24_E	0600
RS25_E	0600
RS26_E	0600
RS27_E	0600
RS28_E	0600
RS29_E	0600
RS30_E	0600
RS31_E	0600
RS32_E	0600
RS33_E	0600
RS34_E	0600
RS35_E	0600
RS36_E	0600
RS37_E	0600
RS38_E	0600
RS39_E	0600
RS40_E	0600
RS41_E	0600
RS42_E	0600
RS43_E	0600
RS44_E	0600
RS45_E	0600
RS46_E	0600
RS47_E	0600
RS48_E	0600
RS49_E	0600
RS50_E	0600
RS51_E	0600
RS52_E	0600
RS53_E	0600
RS54_E	0600
RS55_E	0600
RS56_E	0600
RS57_E	0600
RS58_E	0600
RS59_E	0600
RS60_E	0600
RS61_E	0600
RS62_E	0600
RS63_E	0600
RS64_E	0600
RS65_E	0600
RS66_E	0600
RS67_E	0600
RS68_E	0600
RS69_E	0600
RS70_E	0600
RS71_E	0600
RS72_E	0600
RS73_E	0600
RS74_E	0600
RS75_E	0600
RS76_E	0600
RS77_E	0600
RS78_E	0600
RS79_E	0600
RS80_E	0600
RS81_E	0600
RS82_E	0600
RS83_E	0600
RS84_E	0600
RS85_E	0600
RS86_E	0600
RS87_E	0600
RS88_E	0600
RS89_E	0600
RS90_E	0600
RS91_E	0600
RS92_E	0600
RS93_E	0600
RS94_E	0600
RS95_E	0600
RS96_E	0600
RS97_E	0600
RS98_E	0600
RS99_E	0600
RS100_E	0600

XXXXXXXXXX
 IAR_SSK-LPC178x
 Rev C
 WWW.IAR.COM