Wireless Sensor Decorator Style Rocker Switch [Mx-SW1]





Wireless flat pushbutton with rocker.



Wireless flat pushbutton with double rocker.

Basic Operation

- The Mx-SW1 energy-harvesting Pushbutton generates the power for wireless telegrams itself when the button is pressed, therefor there is no connecting wire and no standby loss.
- Wireless pushbuttons with one rocker can transmit two signals: press rocker up and press rocker down.
- Wireless pushbuttons with double rocker can transmit four evaluable signals: press two rockers up or down.
- Frequency: 315 MHz / 868 MHz / 902 MHz / 928 MHz.

Dimensions (approximate)

- Width: 2.5 in.
- Height: 5 in.
- Thickness: 0.625 in.

Installation

- The mounting base can be screwed onto a flat surface or glued to the wall, on glass or on furniture using the enclosed adhesive tape.

Part Numbers: Single Rocker (Frequency Dependant)	M9-SW1 (902 MHz - North America) M8-SW1 (868 MHz - Europe and China) MJ-SW1 (928 MHz - Japan)
Part Numbers: Double Rocker (Frequency Dependant)	M9-SW2 (902 MHz - North America) M8-SW2 (868 MHz - Europe and China) MJ-SW2 (928 MHz - Japan)







