

## Tuning Fork Crystal




### FEATURES

- Miniature package
- Low cost
- kHz frequency
- Tight tolerance
- Compliant to RoHS directive 2002/95/EC


**RoHS**  
COMPLIANT

The tuning fork type quartz crystal provides ultimate in size, performance and economic trade-offs. So it is used as a clock source in communication equipment, measuring instrument, microprocessor and other time management applications.


STANDARD ELECTRICAL SPECIFICATIONS						
PARAMETER	SYMBOL	CONDITION	UNIT	MIN.	TYP.	MAX.
Frequency range	$F_O$		kHz	-	32.768	-
Frequency tolerance	$\Delta F/F_O$	at 25 °C	ppm	-	$\pm 20$	-
Frequency coefficient	K	ref. to 25 °C	$\text{ppm}/(\Delta^\circ\text{C})^2$	-	-	-0.042
Operating temperature range	$T_{\text{OPR}}$		°C	-10	-	+60
Storage temperature range	$T_{\text{STG}}$		°C	-20	-	+70
Shunt capacitance	$C_0$		pF	-	0.85	2
Motional capacitance	$C_1$		fF	1	2	4
Load capacitance	$C_L$		pF	-	12.5	-
Insulation resistance	$I_R$	100 $V_{\text{DC}}$	$M\Omega$	500	-	-
Drive level	$D_L$		$\mu\text{W}$	-	-	1
Aging (first year)	$F_a$	at 25 °C $\pm 3$ °C	ppm	-5	-	+5
Equation series resistance (ESR)	$R_s$		k $\Omega$	-	-	50

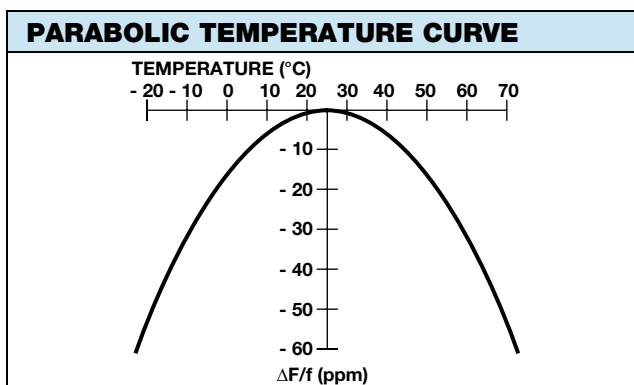

To determine frequency stability, use parabolic curvature (k).

For example: What is stability at 45 °C?

1. Change in temperature (°C) = 45 °C - 25 °C = 20 °C
2. Change in frequency = - 0.042 ppm  $\times$  ( $\Delta^\circ\text{C}$ )  
 = - 0.042 ppm  $\times$  (20)<sup>2</sup>  
 = - 16.8 ppm (max.)

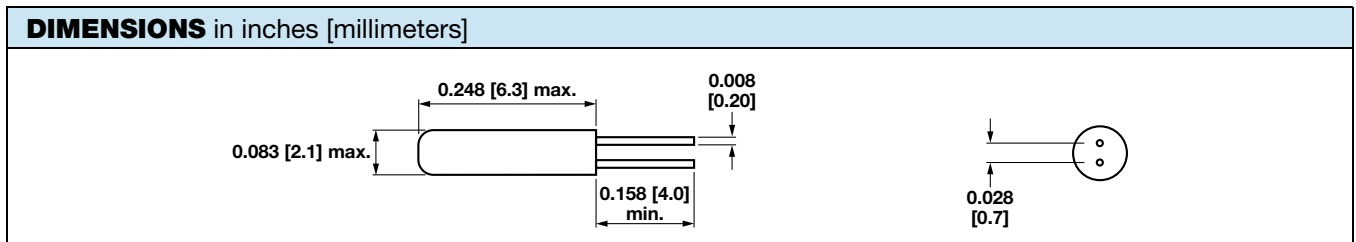



## ORDERING INFORMATION

<b>XT26T</b> MODEL	<b>32.768 kHz</b> FREQUENCY/kHz	<b>e2</b> JEDEC LEAD (Pb)-FREE STANDARD
-----------------------	------------------------------------	--

## GLOBAL PART NUMBER

<div style="display: flex; justify-content: space-around;"> <div style="border: 1px solid black; padding: 2px;">X</div> <div style="border: 1px solid black; padding: 2px;">T</div> <div style="border: 1px solid black; padding: 2px;">2</div> <div style="border: 1px solid black; padding: 2px;">6</div> <div style="border: 1px solid black; padding: 2px;">T</div> </div> <p>MODEL</p>	<div style="border: 1px solid black; padding: 2px;">T</div> <p>OPERATING TEMPERATURE</p>	<div style="border: 1px solid black; padding: 2px;">A</div> <p>PACKAGE CODE</p>	<div style="display: flex; justify-content: space-around;"> <div style="border: 1px solid black; padding: 2px;">3</div> <div style="border: 1px solid black; padding: 2px;">2</div> <div style="border: 1px solid black; padding: 2px;">K</div> <div style="border: 1px solid black; padding: 2px;">7</div> <div style="border: 1px solid black; padding: 2px;">6</div> <div style="border: 1px solid black; padding: 2px;">8</div> </div> <p>FREQUENCY</p>
---	--	---	---

## GLOBAL PART NUMBERING

<div style="display: flex; justify-content: space-around;"> <div style="border: 1px solid black; padding: 2px;">X</div> <div style="border: 1px solid black; padding: 2px;">T</div> <div style="border: 1px solid black; padding: 2px;">9</div> <div style="border: 1px solid black; padding: 2px;">S</div> </div>	<div style="display: flex; justify-content: space-around;"> <div style="border: 1px solid black; padding: 2px;">2</div> <div style="border: 1px solid black; padding: 2px;">0</div> </div>	<div style="border: 1px solid black; padding: 2px;">A</div>	<div style="display: flex; justify-content: space-around;"> <div style="border: 1px solid black; padding: 2px;">N</div> <div style="border: 1px solid black; padding: 2px;">A</div> </div>	<div style="display: flex; justify-content: space-around;"> <div style="border: 1px solid black; padding: 2px;">4</div> <div style="border: 1px solid black; padding: 2px;">0</div> <div style="border: 1px solid black; padding: 2px;">M</div> </div>											
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><th style="text-align: left;">MODEL NUMBER</th></tr> <tr><td>XT9S = XT49S XT9M = XT49M XTU1 = XTUM1</td></tr> </table>	MODEL NUMBER	XT9S = XT49S XT9M = XT49M XTU1 = XTUM1	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><th style="text-align: left;">LOAD CAPACITANCE</th></tr> <tr><td>18 = 18 pF 20 = 20 pF NL = series to be specified by customer</td></tr> </table>	LOAD CAPACITANCE	18 = 18 pF 20 = 20 pF NL = series to be specified by customer	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><th style="text-align: left;">PACKAGE CODE</th></tr> <tr><td><b>Tape and reel</b> G = RF5 (XT9S) H = RF7 (XT9M)</td></tr> <tr><td><b>Bulk</b> A = B04 (all models)</td></tr> </table>	PACKAGE CODE	<b>Tape and reel</b> G = RF5 (XT9S) H = RF7 (XT9M)	<b>Bulk</b> A = B04 (all models)	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><th style="text-align: left;">OPTIONS</th></tr> <tr><td>NA = no additional options RR = extended temperature of - 40 °C to + 85 °C Contact factory for all other options</td></tr> </table>	OPTIONS	NA = no additional options RR = extended temperature of - 40 °C to + 85 °C Contact factory for all other options	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><th style="text-align: left;">FREQUENCY</th></tr> <tr><td>4M = 4 MHz 40M = 40 MHz 100M = 100 MHz 12M288 = 12.288 MHz M is used as decimal place holder in frequency</td></tr> </table>	FREQUENCY	4M = 4 MHz 40M = 40 MHz 100M = 100 MHz 12M288 = 12.288 MHz M is used as decimal place holder in frequency
MODEL NUMBER															
XT9S = XT49S XT9M = XT49M XTU1 = XTUM1															
LOAD CAPACITANCE															
18 = 18 pF 20 = 20 pF NL = series to be specified by customer															
PACKAGE CODE															
<b>Tape and reel</b> G = RF5 (XT9S) H = RF7 (XT9M)															
<b>Bulk</b> A = B04 (all models)															
OPTIONS															
NA = no additional options RR = extended temperature of - 40 °C to + 85 °C Contact factory for all other options															
FREQUENCY															
4M = 4 MHz 40M = 40 MHz 100M = 100 MHz 12M288 = 12.288 MHz M is used as decimal place holder in frequency															
<p>Example: XT49S-20 40M</p>															
<div style="display: flex; justify-content: space-around;"> <div style="border: 1px solid black; padding: 2px;">X</div> <div style="border: 1px solid black; padding: 2px;">T</div> <div style="border: 1px solid black; padding: 2px;">3</div> <div style="border: 1px solid black; padding: 2px;">6</div> </div>	<div style="display: flex; justify-content: space-around;"> <div style="border: 1px solid black; padding: 2px;">2</div> <div style="border: 1px solid black; padding: 2px;">0</div> </div>	<div style="border: 1px solid black; padding: 2px;">A</div>	<div style="display: flex; justify-content: space-around;"> <div style="border: 1px solid black; padding: 2px;">1</div> <div style="border: 1px solid black; padding: 2px;">2</div> <div style="border: 1px solid black; padding: 2px;">M</div> </div>												
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><th style="text-align: left;">MODEL NUMBER</th></tr> <tr><td>XT46 = XT46C XT36 = XT36C</td></tr> </table>	MODEL NUMBER	XT46 = XT46C XT36 = XT36C	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><th style="text-align: left;">LOAD CAPACITANCE</th></tr> <tr><td>18 = 18 pF 20 = 20 pF NL = series to be specified by customer</td></tr> </table>	LOAD CAPACITANCE	18 = 18 pF 20 = 20 pF NL = series to be specified by customer	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><th style="text-align: left;">PACKAGE CODE</th></tr> <tr><td><b>Tape and reel</b> H = RF7</td></tr> <tr><td><b>Bulk</b> A = B04 (all models)</td></tr> </table>	PACKAGE CODE	<b>Tape and reel</b> H = RF7	<b>Bulk</b> A = B04 (all models)	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><th style="text-align: left;">FREQUENCY</th></tr> <tr><td>4M = 4 MHz 40M = 40 MHz 100M = 100 MHz 12M288 = 12.288 MHz M is used as decimal place holder in frequency</td></tr> </table>	FREQUENCY	4M = 4 MHz 40M = 40 MHz 100M = 100 MHz 12M288 = 12.288 MHz M is used as decimal place holder in frequency			
MODEL NUMBER															
XT46 = XT46C XT36 = XT36C															
LOAD CAPACITANCE															
18 = 18 pF 20 = 20 pF NL = series to be specified by customer															
PACKAGE CODE															
<b>Tape and reel</b> H = RF7															
<b>Bulk</b> A = B04 (all models)															
FREQUENCY															
4M = 4 MHz 40M = 40 MHz 100M = 100 MHz 12M288 = 12.288 MHz M is used as decimal place holder in frequency															
<p>Example: XT36C-20 12M</p>															



## Disclaimer

All product specifications and data are subject to change without notice.

Vishay Intertechnology, Inc., its affiliates, agents, and employees, and all persons acting on its or their behalf (collectively, "Vishay"), disclaim any and all liability for any errors, inaccuracies or incompleteness contained herein or in any other disclosure relating to any product.

Vishay disclaims any and all liability arising out of the use or application of any product described herein or of any information provided herein to the maximum extent permitted by law. The product specifications do not expand or otherwise modify Vishay's terms and conditions of purchase, including but not limited to the warranty expressed therein, which apply to these products.

No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted by this document or by any conduct of Vishay.

The products shown herein are not designed for use in medical, life-saving, or life-sustaining applications unless otherwise expressly indicated. Customers using or selling Vishay products not expressly indicated for use in such applications do so entirely at their own risk and agree to fully indemnify Vishay for any damages arising or resulting from such use or sale. Please contact authorized Vishay personnel to obtain written terms and conditions regarding products designed for such applications.

Product names and markings noted herein may be trademarks of their respective owners.